



PATENT  
P56713US

AF  
JF

IN THE UNITED STATES PATENT AND TRADEMARK OFFICE

In re Application of:

Appeal No. \_\_\_\_\_

CLIFFORD L. JORDAN

Serial No.: 10/522,721

Examiner: ALI, SHUMAYA B.

Filed: 11 March 2005

Art Unit: 3771

For: COMBINED AIRCREW SYSTEMS TESTER (CAST)

**CERTIFICATE OF FACSIMILE TRANSMISSION**

Commissioner for Patents  
P.O.Box 1450  
Alexandria, VA 22313-1450

Total 20 pages including this Certificate

Sir:

I hereby certify that, on 14 August 2008, this correspondence, Response to Notification of Non-compliant Appeal Brief (Paper No. 14) and the corrected Summary of Claimed Subject Matter section (replacement pages 5-22), are being facsimile transmitted to the U.S. Patent & Trademark Office (Facsimile No. 571-273-8300).

Respectfully submitted,

  
Robert E. Bushnell  
Attorney for the Applicant  
Registration No. 27,774

1522 "K" Street, N.W., Suite 300  
Washington, D.C. 20005-1202  
Tel: (202) 408-9040  
Fax: (202) 289-7100

Folio: P56713US  
Date: 8/14/08  
I.D.: REB/kf



PATENT  
P56713US

**IN THE UNITED STATES PATENT AND TRADEMARK OFFICE  
BEFORE THE BOARD OF APPEALS AND INTERFERENCES**

In re Application of:

CLIFFORD L. JORDAN

Serial No.: 10/522,721

Examiner: ALI, SHUMAYA B.

Filed: 11 March 2005

Art Unit: 3771

For: COMBINED AIRCREW SYSTEMS TESTER (CAST)

**Appeal No. \_\_\_\_\_**

**RESPONSE TO  
NOTIFICATION OF NON-COMPLIANT APPEAL BRIEF**

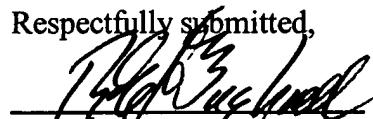
**Paper No. 14**

**Mail Stop Appeal Brief-Patents**  
Commissioner for Patents  
P.O.Box 1450  
Alexandria, VA 22313-1450

Sir:

In response to the Notification of Non-Compliant Appeal Brief mailed on 14 July 2008 (Paper No. 20080709), Applicant submits herewith corrected section V, Summary of Claimed Subject Matter (replacement pages 5-22), in which independent 59 is referred to the specification by page and line number and to the drawings. Entry of the accompanying corrected Summary of Claimed Subject Matter is respectfully requested.

Respectfully submitted,

  
\_\_\_\_\_  
Robert E. Bushnell  
Attorney for Appellant  
Reg. No.: 27,774

1522 "K" Street, N.W., Suite 300  
Washington, D.C. 20005  
Area Code: 202-408-9040

Folio: P56713US  
Date: 14 August 2008  
I.D.: REB/kf

## V. SUMMARY OF CLAIMED SUBJECT MATTER

A functional diagram of a gas system for a combined aircrew system tester (CAST) is shown in FIG.1. The gas system of the tester provides two air sources. One, which may be considered as the “first unit” of Claim 59, is for testing a mask or a vest, and the other, which may be considered as the “second unit” of Claim 59, is for testing is for a G-suit (a suit designed to counteract the physiological effects of acceleration on an aviator or astronaut - called also called an anti-G suit). The air for the G-suit is provided through a G-suit port and the air for the mask/vest through the mask port. These air sources are used to perform maintenance and preflight testing of the pilot's life support equipment. The mask port air is used to test the pilot's oxygen mask and COMBAT EDGE gear. There are two modes of mask testing, ‘normal’ and ‘PBG’ (Pressure Breathing for G (acceleration force of gravity). (Line 15, page 6 - line 1, page 7)

Referring to Figs. 1 through 4, air for the mask starts by passing through an input filter 101. The ambient air is input through an inlet port. A screen mesh filter assembly screws into the inlet port to prevent particles from entering the air stream. The thread on the inlet port is designed so that it can accept a C2 (chemical) filter 246 used for chemical warfare. This feature makes it possible to use the tester in a chemical environment. All the air outputted by the tester passes through the C2 when it is installed. (Lines 2-7, page 7)

Then, the air for the mask is compressed by a low-pressure compressor system 102, which may be considered as the “first compressor” of the “common gas system” of Claim 59. (Line 8, page 7)

The low-pressure compressor system 102 includes at least one blower but preferably includes at least three regenerative blowers 102a, 102b and 102c connected in series to generate the necessary pressure and flow. The output pressure is determined by the speed of the blowers 102a,

102b and 102c and how many blowers 102a, 102b and 102c are turned on. The voltage applied to each of the blowers 102a, 102b and 102c controls the speed. If the voltage decreases, the speed decreases and the output pressure is decreased. The voltage is controlled by a speed control circuit, which is part of the speed control PCB (Printed Circuit Board, PCB3). (Lines 9-16, page 7)

Then, the air for the mask passes through one of two flow sensors 106, 107, which are used to alert the user that his or her equipment is leaking and to measure the leak rate. One flow sensor is a high flow sensor 106 which measures flow from 0 to 10,000 cc/min (cubic centimeters per minute) and the other flow sensor is a low flow sensor 107 which measures flow from 0 to 300 cc/min. A mask control valve 104 and a low flow valve 105 determine which sensor is used. One of two valves 104 and 105 which are normally closed is open to permit the air to flow through one of the flow sensors 106 and 107. The output from the flow sensor 106 or 107 is fed into a digital indicator 274 (FIG.2) to indicate flow. The indicator 274 reads out in the appropriate units. Its range is set by an embedded processor on a main PCB (Printed Circuit Board, PCB1). (Line 17, page 7 - line 2, page 8)

These sensors are excited with 10.0 VDC (voltage of direct current). At zero flow their output is 1.0 VDC (voltage of direct current). At full scale the output is 5.0 VDC (voltage of direct current). The low flow sensor 107 is not quite linear. To compensate for this, five linear curves are fitted to the flow versus voltage curve. The slopes of these five curves are programmed into the digital indicator 274 that is used to indicate flow. (Lines 3-7, page 8)

Next, the air passes through a check valve 118 and flows out the mask port 242. The check valve 118 prevents foreign materials from entering the gas system of the tester. A pressure switch 111 and a mask pressure sensor 112 monitor the mask port pressure. They are used to control and limit the mask port pressure. The mask pressure sensor 112 converts pressure to voltage. The voltage

is fed into the digital indicator 270 where it is converted to a digital signal, which is presented as a number scaled in engineering units. This number is updated 13 times a second. The indicator has three logic high outputs, which output when the pressure exceeds their set pressure. In addition, the pressure switch 111 is connected to the mask pressure sensor 112. The pressure switch 111 is normally closed, and is preferably set to open at 18 in (inch) H<sub>2</sub>O. (Lines 8-17, page 8)

A mask limit valve 114 and a backup mask limit valve 115 are also provided for controlling the mask port pressure. (Lines 18-19, page 8)

The air for the G-suit is produced by multiple compressors 102a, 102b, 102c and 103. At pressures below 55 in H<sub>2</sub>O, the low-pressure compressor system 102 compresses the air. At pressures above 55 in H<sub>2</sub>O, a high-pressure compressor 103, which may be considered as the "second compressor" of Claim 59's "common gas system", compresses the air. This is done to minimize the amount of time to inflate the G-suit. The low-pressure compressors (with regenerative blowers) 102a, 102b and 102c produce high flow at relatively low pressures while the high-pressure compressor 103 produces low flow but can compress the air to a higher pressure. This combination works particularly well when inflating the G-suit because when the G-suit inflates, initially there is a large change in volume without much change in pressure, and then, as the G-suit fills out and becomes firm, the change in volume slows down and the rate the pressure increases. (Line 20, page 8 - line 6, page 9)

A G-suit regulator enable valve 109 and a G-suit regulator 108 are provided for regulating the G-suit pressure. The G-suit regulator enable valve 109 is normally closed. When the G-suit pressure increases up to a certain pressure, the G-suit regulator enable valve 109 is opened to vent the G-suit regulator 108. (Lines 7-10, page 9)

A G-suit control valve 110 is further provided for controlling the G-suit pressure. (Line 11,

page 9)

With this configuration, the present invention does not require a separate high pressure source of breathing air and oxygen. (Lines 12-13, page 9)

As explained above, the present invention is self contained. Thus, a control panel of the combined aircrew systems tester of the present invention has a plurality of switches and indicators for controlling the tests for the life support systems of an aircrew member. (Lines 14-16, page 9)

FIG. 2 shows a preferred embodiment of the control panel, which may be considered as the “control panel” of Claim 59. (Line 17, page 9)

As shown in Fig. 2, the control panel 200 includes a ‘mode select’ switch 201, a ‘pressure select’ switch 202, a ‘test select’ switch 203, and a ‘press to test’ switch 204. (Lines 18-19, page 9)

The “mode select switch” of Claim 59’s “control panel” may be considered as mode select portion 201 includes a mode select switch 201A preferably provides for two dynamic flow leak testing (high leak (‘LK-HI’) 201D and low leak (‘LK-LO’) 201C), a G-suit leak testing (‘LK-GS’) 201B, and one mask testing (“mask”) 201E. (Lines 20-22, page 9)

The pressure select switch 202 is preferably provided for 41M, 43M, or 45M (where M stands for 1000). Thus, the air is provided at one of four positive pressures; normal, 41M, 43M, or 45M. (Line 23, page 9 - line 2, page 10)

The test select switch 203 provides for a PBG breathing testing (‘PBG’), a normal breathing testing (‘normal’), and ‘off’. The test select switch 203 is preferably a three-position toggle switch. The test select switch 203 drives two de-bouncers 332, 334, the PBG and the normal logic steps. (Lines 3-6, page 10)

A leaking indicator 235 is also included in the control panel 200. (Line 7, page 10)

The “third unit” of Claim 59 may be considered as the communication section, which

includes audio input A 222 and B 224, a carbon headset input 226, a press to test ('PTT') jack 228, a continuity status of a microphone 230, a continuity status of the earphone 232, a microphone "on" indicator 234, an audio select switch 236 that can be switched to continuity test mode 236a, 'LIS/TLK 1' (listen/talk 1) 236b, or 'LIS/TLK 2' 236c. A port for the goggle 238 and a 'G-suit' button 240 are included along with a mask port 242. Indicators 244a and 244b relating to the PBG (pressure breathing for Gs) are also included. Reference 244b indicates that 'PBG timed out', 244a indicator concerns the 'PBG'. The control panel 200 also includes the filter 246. There are ports for the power 248 and the battery 250. A switch or indicator for tare 252 is along with a hold 254, and a reset 256 indicator or switch. A G-suit ready indicator 258 is also included along with a G-suit testing on/off switch 260 and a pressure control knob 262. The tester also includes a G-suit port pressure displays 268, a mask port pressure display 270, a time display 272, and a high and low flow display 274. The displays can be a digital display such as light emitting diodes, or liquid crystal display or other types of indicators. (Lines 8-21, page 10)

During the operation of the tester, the aircrew does not wear COMBAT EDGE, the user selects a mask mode of operation by pressing the mode select switch 201. The user selects a desired breathing pressure by pressing the pressure select switch 202. Then the test select switch 203 is toggled to the 'normal' position, which starts air flow out of the mask port at slight positive pressure. Then the press to test button 204 is pushed to cause the air pressure to increase to the pressure selected. The air is preferably provided at one of four positive pressures; normal, 41M, 43M, or 45M. When the mask mode has been selected and the test select switch is in the 'normal' position, the mask control valve 104 opens permitting the air to flow out the mask port. When operating in the normal mask mode, the air outputted through the mask port is provided at a pressure from 1 to 10 in H<sub>2</sub>O. (Lines 1-10, page 11)

The PBG (Pressure breathing for G) breathing is used to perform preflight tests and fit tests while the users are wearing COMBAT EDGE. The users wearing COMBAT EDGE are required to take the preflight test on their masks at PBG breathing pressure level. This test is performed at a breathing pressure of 16 in H<sub>2</sub>O with the G-suit not inflated. When the G-suit is not inflated, it is dangerous to breathe air at pressures much above 16 in H<sub>2</sub>O. When the mode select switch 201 is set to 'mask' and the test select switch 203 is in the 'PBG' position, the air flows from mask port at normal pressure. When the press to test button 204 is depressed, the breathing pressure increases to 16 in H<sub>2</sub>O. The user verifies that he or she is breathing normally, verifies proper mask functions and notes that their vest starts to inflate. Then the user momentarily stops breathing to test a leak. A light of the leaking indicator 235 will go out if there are no leaks greater than 5.5 lpm (liters per minute). When the press to test button 204 is pressed, the speed of the low-pressure compressor system 102 increases. (Lines 11-22, page 11)

After a user is initially fitted with COMBAT EDGE equipment, a fit test is performed. This test is similar to the preflight test except the fit test is performed at 32 in H<sub>2</sub>O. The user has to be sitting down to perform this test. The fit test starts by performing the preflight test. Then the mask port pressure is increased slowly to 32 in H<sub>2</sub>O by adjusting the pressure control release and knob 262 until the air pressure reaches 32 in H<sub>2</sub>O. Then the preflight test is repeated. (Lines 1-6, page 12)

During preflight and fitting a red light turns on when flow exceeds 5.5 lpm. The user momentarily holds his or her breath to check for leaks. If there are no leaks, the leak light is turned off. (Lines 7-9, page 12)

The voltage from the low flow sensor 107 is compared with a preset voltage that is equivalent to the sensor output when the flow is 5.5 lpm. When the voltage exceeds the preset voltage, the light of the leaking indicator 235 is turned on. (Lines 10-12, page 12)

In order to do the preflight test safely, the G-suit has to be inflated. The low-pressure compressor system 102 and the high-pressure compressor 103 provide the air for the G-suit. When the G-suit switch 260 is turned on, the G-suit control valve 110 opens and the low-pressure compressor system 102 is turned on at its maximum operating speed so that the air rapidly fills the G-suit to its final approximate shape. When the G-suit pressure reaches 55 in H<sub>2</sub>O, as sensed by G-suit pressure sensor 113, the high-pressure compressor 103 takes over filling the G-suit to its final pressure. The output of the G-suit pressure sensor 113 is fed into the digital indicator/controller 268. The indicator 268 turns the input voltage into a digital signal and processes it, rescaling it into engineering units and outputting it in the form of a number presented on the indicator. The G-suit pressure is maintained at 60 in H<sub>2</sub>O by the G-suit regulator 108. If the G-suit pressure exceeds 70 in H<sub>2</sub>O, the high-pressure compressor 103 is turned off to limit the G-suit pressure to 70 in H<sub>2</sub>O. After the G-suit pressure stabilizes at 60 in H<sub>2</sub>O, the user turns off the G-suit switch 260. (Line 13, page 12 - line 2, page 13)

The G-suit is periodically checked for leakage. To do this, the G-suit is pressurized to 138.4 in H<sub>2</sub>O (5 psi, pounds per square inch) and monitored for a change in pressure over an interval of time. (Lines 3-5, page 13)

When the mode select switch 201 is in 'LK-GS' and the G-suit switch 260 is turned on, the G-suit regulator enable valve 109 is turned on to disable the G-suit regulator 108, allowing the G-suit pressure to rise to pressures greater than 60 in H<sub>2</sub>O, which is a normal G-suit operating pressure. The high-pressure compressor is turned off at 138.4 in H<sub>2</sub>O. When the pressure reaches 138.4 in H<sub>2</sub>O, the power to the G-suit control valve 110 and the high-pressure compressor 103 is turned off to limit the pressure to 138.4 in H<sub>2</sub>O. Once the pressure stabilizes, the user turns off the G-suit switch 260 to close off the G-suit. The tare switch 252 is pushed for zeroing the time and G-suit pressure. At

120 seconds the hold button 254 is pressed for holding the indicated change in time and change in G-suit pressure. From these changes, the leak rate can be obtained. (Lines 6-15, page 13)

When the mode select switch 201 is in the 'LK-HI' position (indicator 201D), the mask control valve 104 is opened. The low flow valve 105 remains off for directing all the flow through the high flow sensor 106. (Lines 16-18, page 13)

When the mode select switch 201 is in the 'LK-LO' position (indicator 201C), the mask control valve 104 is closed. The low flow valve 105 is turned on for directing all the flow through the low flow sensor 107. (Lines 19-21, page 13)

A second method used to verify the oxygen equipment seals is to measure a drop in pressure over an interval of time. The component under the test is attached to the mask port, such as the "first unit" of Claim 59, and is pressurized to 32 in H<sub>2</sub>O by setting the mode to 'mask' and the test select switch 203 to 'PBG'. The press to test button 204 is pushed and the pressure control knob 262 is adjusted until air pressure reaches 32 in H<sub>2</sub>O. After the pressure has stabilized, the press to test button 204 is released to cut off the air source. The tare switch 252 is pressed to start a timer and zero the pressure indicator, 268 and 270. At a prescribed time the hold switch 254 is pressed to hold the timer and the pressure indicator readings. If the change in pressure is less than a prescribed amount in the prescribed time, the leak rate is within tolerance. (Line 22, page 13 - line 8, page 14)

The present invention is designed to address safety issues with the following features. (Lines 9-10, page 14)

When performing COMBAT EDGE testing, it is necessary to expose the user to excessive breathing pressures. Exposure to excessive breathing pressure can hurt the user. It is only safe under curtain conditions and for limited periods of exposure. Under no circumstance should the breathing air pressure exceed 34 in H<sub>2</sub>O. (Lines 11-14, page 14)

The present invention compresses the filtered ambient air to pressures close to the maximum allowable output mask pressure, while the conventional testers start with air that is compressed to pressures that are orders of magnitude greater than the maximum allowable output mask pressure. If the step down regulation system in the conventional pressures completely fails, the user is exposed to pressures that many times greater than what is safe. On the other hand, the user of the present invention would be exposed to pressures not higher than the maximum allowable mask output pressure. (Lines 15-21, page 14)

As stated before, the blowers 102a, 102b, and 102c provide the breathing air. The maximum pressure that can be developed by each of the blowers 102a, 102b, and 102c is 21 in H<sub>2</sub>O when being driven by main power supply voltage at zero flow. If all pressure limiting systems were to fail, the maximum breathing pressure that could be developed to 63 in H<sub>2</sub>O at zero flow, which is comparable to the maximum safe pressure of 34 in H<sub>2</sub>O. When the user is breathing, the pressure is significantly less. (Line 22, page 14 - line 4, page 15)

Another safety feature of the present invention is a mask pressure limiting system. In the preflight test, if the pressure increases above 18 in H<sub>2</sub>O, the power to the mask limit valve 114 is cut, venting the system through a check valve 119. This check valve 119 prevents back flow through the mask limit valve 114 when the user is inhaling. In addition, the mask port pressure is limited to 34 in H<sub>2</sub>O under all circumstances. The backup mask limit valve 115 operating current is passed through a pressure limit switch 111 set to open at 34 in H<sub>2</sub>O. The backup mask limit valve 115 is a normally open valve. When the pressure limit switch 111 opens, the operating current is interrupted to open the backup mask limit valve 115. (Lines 5-12, page 15)

The method of controlling the CAST is described in more detail below. Fig. 4A through 4S illustrate schematic diagrams of sections 4A through 4S, respectively of the overall block diagram

of Fig. 3 of the present invention. The schematics of 4A through 4S are sectioned to show the entire schematic of the present invention. Some portions may overlap in order to accurately show the connections between the individual elements. (Lines 13-17, page 15)

The operation of the “common gas system” of Claim 59 may be considered as controlled by the main printed circuit board (PCB 1), which uses CMOS (complementary metal oxide semiconductor) logic to control the overall operation. There are two pressure sensors, two digital indicators, five switches and one potentiometer that input and drive the logic functions located on the main PCB (Printed Circuit Board, PCB1). The logic outputs control the speed control PCB (PCB3), and the valves that control flow. (Line 18, page 15 - line 1, page 16)

All logic inputs are derived from either switch closures or TTL (transistor-transistor logic) located in the digital indicators. They pass through de-bouncers. The de-bouncers clean up these inputs and turning them into single pulse square waves with CMOS logic high levels. (Lines 2-4, page 16)

The outputs refer to either compressor motors or valves. The valve outputs and the high-pressure compressor output are located on the main PCB (PCB1). They include an opto isolator and power relays. This is done to protect the CMOS logic from inductive spikes that occur when switching a valve. The high-pressure compressor output is located on the main PCB (PCB1) and the low-pressure compressors outputs are located on the speed control PCB (PCB3). (Lines 5-10, page 16)

A mode select circuit includes the mode select switch 201, a momentary push button driving a Johnson Counter (also known as a twisted-ring counter) (see FIG. 4D). The Johnson counter provides the ‘MASK’ for the mask testing, ‘LK-HI’ for the high-leak testing, ‘LK-LO’ for the low leak testing, and ‘LK-GS’ for G-suit leak testing. It drives four buffers, which drive four LEDs (light

emitting diodes) 201B, 201C, 201D, 201E, which indicate the mode that is selected. The pressure select circuit works the same way. (Lines 11-16, page 16)

The test select circuit starts with a three-position toggle switch 203, which drive two de-bouncers. The de-bouncer outputs are the 'PBG' and 'normal' logic steps. (See FIG. 4F) (lines 17-18, page 16)

The press to test switch 204 and the G-suit switch 260 drive two de-bouncers. Their outputs are the 'TST' and "GSUIT" logic steps. (Lines 19-20, page 16)

With respect to the G-suit pressure sensor 113 and the mask pressure sensor 112, the output from the G-suit pressure sensor 113 is fed into a digital indicator 268. The indicator 268 turns the input voltage into a digital signal and processes it, rescaling it into engineering units and outputting it in the form of a number presented on the indicator 268. It also provides a TTL logic high output at 55, 70 and 138.4 in H<sub>2</sub>O. The indicator provides 10-volt excitation for the pressure transducer. The mask transducer (sensor) 112 works the same except it outputs TTL logic high outputs at 1, 18 and 34 in H<sub>2</sub>O. (See FIG. 4, part O) (line 21, page 16 - line 3, page 17)

The G-suit regulator enable valve 109 is normally closed. It is turned on to vent the G-suit regulator 108 to regulate the G-suit pressure (GSP) to 60 in H<sub>2</sub>O, which is the normal suit operating pressure. It is turned off when performing a G-suit leak test (LK-GS). (Lines 4-6, page 17)

The G-suit control valve 110 is normally closed. In any mode select position other than 'LK-GS', the G-suit control valve 110 is turned on until the G-suit pressure reaches 70 in H<sub>2</sub>O. In the 'LK-GS' position, the G-suit control valve 110 is turned on until the G-suit pressure reaches 138.4 in H<sub>2</sub>O. (Lines 7-10, page 17)

With respect to the low flow valve 105, this valve 105 is turned on until the mask pressure (MP) reaches 34 in H<sub>2</sub>O when the press to test switch 204 is pressed in the 'LK-LO' position. (Lines

11-13, page 17)

The mask limit valve 114 is normally open. When the test select switch 203 is in 'normal', the mask limit valve 114 is closed when the MP (mask pressure) is less than 18 in H<sub>2</sub>O. In the 'LK-HI' or 'LK-LO' or the test select in the 'PBG' position, the mask limit valve 114 is on until mask port pressure reaches 34 in H<sub>2</sub>O. (Lines 14-17, page 17)

The mask control valve 104 is normally closed. In the 'LK-HI' position, the mask control valve 104 is on until the mask pressure reaches 34 in H<sub>2</sub>O. In the 'mask' position, the mask control valve 104 is on when the test select switch 203 is in the 'PBG' or 'normal' positions. (Lines 18-21, page 17)

The backup mask limit valve 115 is normally open. It is closed at the same time the mask limit valve 114 is closed. Its power passes through the pressure switch 111. If the mask pressure exceeds 34 in H<sub>2</sub>O, the pressure switch 111 opens to cut off power to the backup mask limit valve 115. The backup mask limit valve 115 opens to reduce the mask port pressure. (Line 22, page 17 - line 2, page 18)

The 'High-Pressure Compressor' output turns on the high-pressure compressor 103 at 55 in H<sub>2</sub>O and off at 70 or 138.4 in H<sub>2</sub>O. In the 'LK-GS' position, it turns off at 138.4 in H<sub>2</sub>O. (Lines 3-5, page 18)

The 'Low-Pressure Compressor 1' output turns on the low-pressure compressor 1 102a when the test select switch 203 is in either the PBG or 'normal' positions. If the mode select switch 201 is in the 'LK-HI' or 'LK-LO' position, the blower 102a is on. This is done to provide positive flow whenever the mask port is in use. (Lines 6-9, page 18)

The 'Low-pressure Compressor 2' output and the 'Low-Pressure Compressor 3' output turn on the low-pressure compressor 2 as '102b' in FIG. 1 and the low-pressure compressor 3 as '102c'

in FIG. 1 when the test select switch 203 is in the 'normal' or 'PBG' position and the mask pressure drops below 1 in H<sub>2</sub>O. When the test switch 203 is in the 'normal' and the mode select switch is 'LK-LO' or 'LK-HI' position, the low-pressure compressor 2 and 3 102b and 102c are turned on when the press to test switch 204 is pushed. When the test switch 203 is in the 'PBG', the low-pressure compressor 2 and 3 102b and 102c are turned on when the press to test switch 204 is pushed and, after one minute, these two low-pressure compressors 102b and 102c are turned off. (Lines 10-18, page 18)

The 'Full ON' output is used to turn on the three low-pressure compressors 102a, 102b, and 102c of the low-pressure compressor system 102 at their maximum operating speed when they are used to inflate the G-suit. This output is high when the G-suit switch 260 is turned on if no output is required from the mask port. The 'Mask Port' output takes precedence over G-suit inflation. (Lines 19-23, page 18)

If the 'Variable Speed Enable', '41 M Speed Enable', '43M Speed Enable' or '45M Speed Enable' is not turned on, the 'Normal Speed Enable' is on (high). (Line 4, page 18 - line 1, page 19)

When 41M is selected, the press to test button 204 is pushed, and the test select switch 203 is in the 'normal' or 'PBG' position, the '41 M Speed Enable' is on (high). (Lines 2-3, page 19)

When 43M is selected, the press to test button 204 is pushed, and the test select switch 203 is in the 'normal' or 'PBG' position, the '43M Speed Enable' is on (high). (Lines 4-5, page 19)

When 45M is selected, the press to test button 204 is pushed, and the test select switch 203 is in the 'normal' or 'PBG' position, the '45M Speed Enable' is on (high). (Lines 6-7, page 19)

When 'LK-HI' or 'LK-LO' or 'PBG' with the press to test button 204 is pushed, the 'Variable Speed Enable' is on provided the G-suit pressure is greater than 55 in H<sub>2</sub>O. The output from the G-suit pressure transducer (sensor) 113 is compared with a preset level to determine

whether condition is being met. (Lines 8-11, page 19)

The high-pressure compressor is turned on by the 'HP CMPR ON' signal. The 'HP CMPR ON' goes high when the G-suit switch is turned on and the following conditions are met; the G-suit pressure is greater than 55 in H<sub>2</sub>O but less than 138.4 in H<sub>2</sub>O, and the G-suit pressure is less than 70 in H<sub>2</sub>O or 'LK-GS' mode selected. (Lines 12-15, page 19)

The speed control PCB (PCB3) provides power to the three low-pressure compressors 102a, 102b and 102c. The power provided to the low-pressure compressors voltage is variable. This is done to vary the compressors output pressure. The low-pressure compressor 1 102a is turned off and on independently of the low-pressure compressors 2 102b and 3 102c. The speed control section outputs one of four fixed voltages or a variable voltage to the compressors that are turned on. Three adjustable voltage regulators tied in parallel supply the compressor voltage. Five external variable resistors set the regulators output voltage. (See FIG. 4N) (Lines 16-23, page 19)

The speed control PCB (PCB3) has eight logic inputs. The logic inputs set the variable speed control and determine which compressors are turned on. The logic inputs are 'Full On', 'the Low-Pressure Compressor 1', 'the Low-Pressure Compressor 2 and 3', 'Normal Speed Enable', '41M Speed Enable', '43M Speed Enable', '45M Speed Enable', and 'Variable Speed Enable'. (Line 24, page 19 - line 4, page 20)

The low-pressure compressor motor outputs include four power relays. Two power relays drive the low-pressure compressor 1 motor and the other two power relays drive the low-pressure compressor 2 and 3 motors. Opto isolators drive the power relays. This is done to protect the CMOS logic from inductive spikes that occurs when switching the motors. When the 'Full On' input goes high, one set of relays turns on, outputting 15 VDC (voltage of direct current) to all three low-pressure compressor motors 102a, 102b and 102c. When either or both of the second set relays turn

on, the variable voltage from the voltage regulators is outputted to the appropriate motors.(See FIG. 4M and 4N) (lines 5-12, page 20)

The pressure control 262 located on the control panel 200 is the variable resistor that is inputted to the speed control board. It is bypassed when the variable pressure switch 290 is in the 'CONST' position 290a causing the mask port pressure to stay at 16 in H20. Otherwise the output pressure can be varied between 16 and 34 in H20 when the test select switch 203 is set to 'PBG'. (Lines 13-17, page 20)

As part of preflight, the user verifies his or her communication equipment. The user attaches to the tester and talks into the microphone. The sound picked up by the microphone should be clearly heard with the earphones. Audio system is made up of a preamp and a power amp. Several different kinds of microphones can be inputted into the tester. There are four different microphone inputs. The primary input is 'audio A' 222. This input is configured to accept a 5-ohm dynamic microphone when the audio select switch 236 is in the LIS/TLK 1 (listen/talk) 236b. In the LIS/TLK 2 position 236c, it is configured to interface with an Electret microphone that requires 10-VDC (voltage of direct current) bias with 8 mA (milliamperes) current limit. In this position an audio input transformer and bias circuit is added to the input circuit. The output of the audio input transformer is fed into the preamp. There are two carbon microphone inputs parallel together. The two inputs are the carbon headset jack 226 and the PTT (Press to talk) talk jack 228. These inputs 226 and 228 have 24-VDC bias current limited to 10 mA. The input from the carbon microphone is fed directly to the power amplifier bypassing the preamp. The primary audio output is through the audio A jack 222. In the LIS/TLK 1 236b, it is setup to output into a 10-ohm dynamic microphone. In the LIS/TLK 2 position 236c, it is designed to output to 600 ohm input impedance earphones. The 'audio B' jack 224 is always configured to accept 5 ohm dynamic microphone and output to a 10 ohm dynamic

load. The audio A jack 222 also provides +28 VDC (voltage of direct current) up to 200 mA power. It can be used to drive an ANR (Active Noised Reduction) unit. (Line 18, page 20 - line 13, page 21)

A built in continuity tester can be provided to trouble shoot the communication gear. When the audio select switch 236 is in the 'cont' (continuity) position 236a, the communication circuits turn into a continuity tester. The carbon microphone, dynamic microphone and dynamic headset output DC resistance is monitored. If the dynamic microphone input resistance is between 4 to 7 ohms, the microphone light 230 will turn green. If it is less than 2 ohms, the microphone light 230 will turn red. If the output resistance is between 8 to 12 ohms, the earphone light 232 will turn green. If the output resistance is less than 2 ohms, the earphone light 232 will turn red. If the carbon microphone input resistance is between 80 to 500 ohms, the microphone light 230 will turn green. If it is less than 20 ohms, the microphone light will turn red. The input/output resistance of these three circuits is determined by holding the current through input/output constant. Now the resistance is directly proportional to the voltage. This voltage is amplified and fed into a window comparator and a limit comparator. The window comparators control the microphone/earphone green lights. If the comparators input voltage falls within the upper and lower set points, the green light will turn on. If the input voltage is less than limit comparator set voltage, the red light will turn on. (Line 14, page 21 - line 5, page 22)

To perform a goggle test, the EEU-2P flash goggles or equivalent are attached to the tester. After 10 seconds, the PTT button 228 is pressed. The goggles will turn opaque if they are working. 28 to 32 VDC is supplied to the EEU-2P goggles through the goggle jack 238. This voltage has to be 27 VDC min (minimum voltage). when outputting 20ma into 1400 ohm. The shorted output current must be 70 mA minimum and not more than 100 mA maximum. This is accomplished with

voltage regulator and current limiting circuits. (Lines 6-11, page 22)

Fig. 5 illustrates a general block diagram of a portion of the present invention. The “common gas system” of Claim 59 may be considered to include a gas system unit 802 which includes elements such as valve and compressor units and a speed control unit (See PCB3). The gas system unit 802 is controlled by the main PCB (PCB1) which uses the logic unit 804 to control the overall operation (See FIG. 4). The logic unit 804 outputs control the speed control unit (See PCB3), and the valves that control the flow. The “third unit” of Claim 59 may be considered as communication unit 806, which is also included in the present invention and includes the audio unit 808 (See PCB2) which is connected to PCB1. (Lines 12-18, page 22)

The present invention integrates a plurality of testers into one unit and yet requires less power than earlier systems. The unit runs on standard 115 or 230 VAC (voltage of alternating current), 47-440 Hz (hertz), 4 Amperes. Input requirements are 85-132/170-264 VAC 47-440 HZ (hertz) 400W (watts). The mask port pressure/flow output schedule is shown by the following table: (Line 19, page 22 - line 11, page 23)

**Table 1**

Setting	@ 0 LPM in H <sub>2</sub> O	@ 5.0 LPM in H <sub>2</sub> O
NORMAL	3.25	1.75±.5
41M	5.8	4.00±.5
43M	8.25	6.00±.5
45M	10.5	8.00±.5
PBG	16-32	NA
LK HI	16-32	NA
LK LO	16-32	NA

The tester 100 can be run from an internal rechargeable battery pack as an alternative to alternating current input from an outside source connected to for example the battery port 250. The

battery pack can be nickel metal hydride batteries accessible through a weatherproof side panel. Other types of batteries such as lithium-ion and lithium-polymer can also be used. The power cord for outside power source can be attached to the back panel when the console is mounted. A built in charger can charge the tester in one hour or less or 20 minutes on the average. The tester can run up to 8 hours or more from its internal rechargeable battery pack. The duration can be increased depending on the type and size of the battery. (Lines 12-20, page 23)

The G-Suit port output pressure is shown by the following table: (line 21, page 23 - line 3, page 24)

**Table 2**

Setting	Output Press. in H <sub>2</sub> O
G-suit on	58±1
G-suit leak test	0-150

An exemplar specification for the construction of embodiments of the present invention (CAST) contemplates: (line 4, page 24)

The leak indication is shown by a leak above 5.5±.5 lpm (liters per minute). The flow indication is 0-10,000±25 sccm and 0-300±1 sccm. The pressure drop leak range is 0-5 lpm. The temperature limits for the operating range is 0°C to 50°C while for storage is -40°C to 75°C. The flash goggle power is 28+2 VDC (voltage of direct current), 70-100 ma (milliamperes), current limited to 100 ma (milliamperes) maximum. The active noise reduction (ANR) power is +28 ±4 VDC (voltage of direct current) 200 ma (milliamperes) minimum. The microphone input current is 8 mA (milliamperes) maximum at 10 VDC (voltage of direct current). (Lines 5-12, page 24)